


# Quadrant Single Door

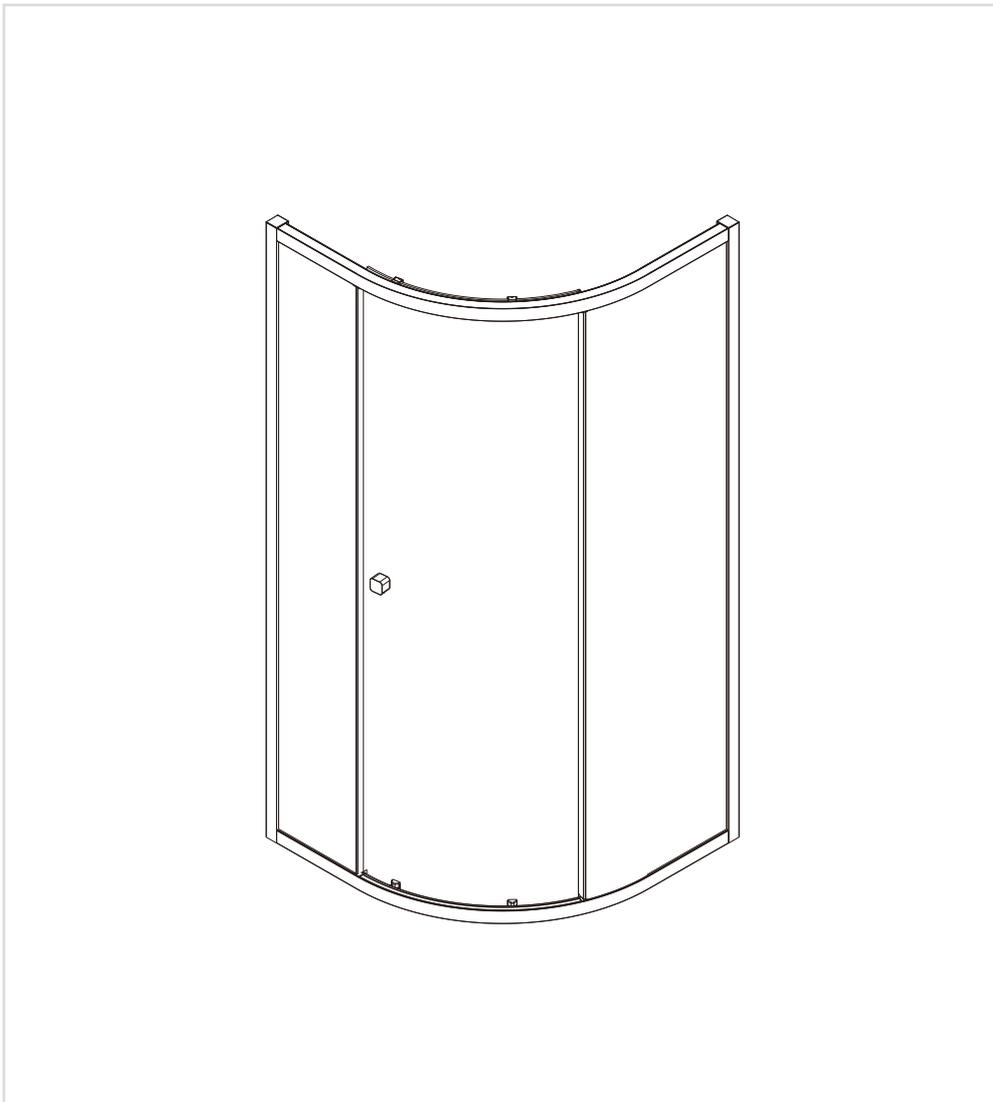

## PRODUCT CODES:

CAQSSC0800\_V2  
CAQSSC0900\_V2  
CAQSSC10X8\_V2  
CAQSSC12X8\_V2  
CAQSSC12X9\_V2  
CAQSBC0800\_V2  
CAQSBC0900\_V2  
CAQSBC10X8\_V2  
CAQSBC12X8\_V2  
CAQSBC12X9\_V2  
CAQSFC0800\_V2  
CAQSFC0900\_V2  
CAQSFC10X8\_V2  
CAQSFC12X8\_V2  
CAQSFC12X9\_V2  
CAQSVC0800  
CAQSVC0900  
CAQSVC10X8  
CAQSVC12X8  
CAQSVC12X9  
CAQSBZC0800  
CAQSBZC0900  
CAQSBZC10X8  
CAQSBZC12X8  
CAQSBZC12X9  
CAQSTC0800  
CAQSTC0900  
CAQSTC10X8  
CAQSTC12X8  
CAQSTC12X9  
  
HXQSSC0800  
HXQSSC0900  
HXQSSC10X8  
HXQSSC12X8  
HXQSSC12X9  
HXQSBC0800  
HXQSBC0900  
HXQSBC10X8  
HXQSBC12X8  
HXQSBC12X9  
HXQSFC0800  
HXQSFC0900  
HXQSFC10X8  
HXQSFC12X8  
HXQSFC12X9

## 1. Pre-Installation Checklist

### ☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Shower tray **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

### ⚠ Safety Notes:

- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

## 2. Unpacking & Components

### Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

### Missing/Damaged Parts?

Contact Bathroom Brands immediately: ☎0345 873 8840.

## 3. Step-by-Step Installation

### A. Frame Assembly

#### 1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

#### 2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×8 total).
- Cover ends with profile caps if any.

### B. Door Installation

#### 3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn't close smoothly.

#### 4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

### C. Final Checks

#### 5) Level & Secure:


- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.

## 4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

Ensure seals are flush to prevent leaks.


## ORIENTATION

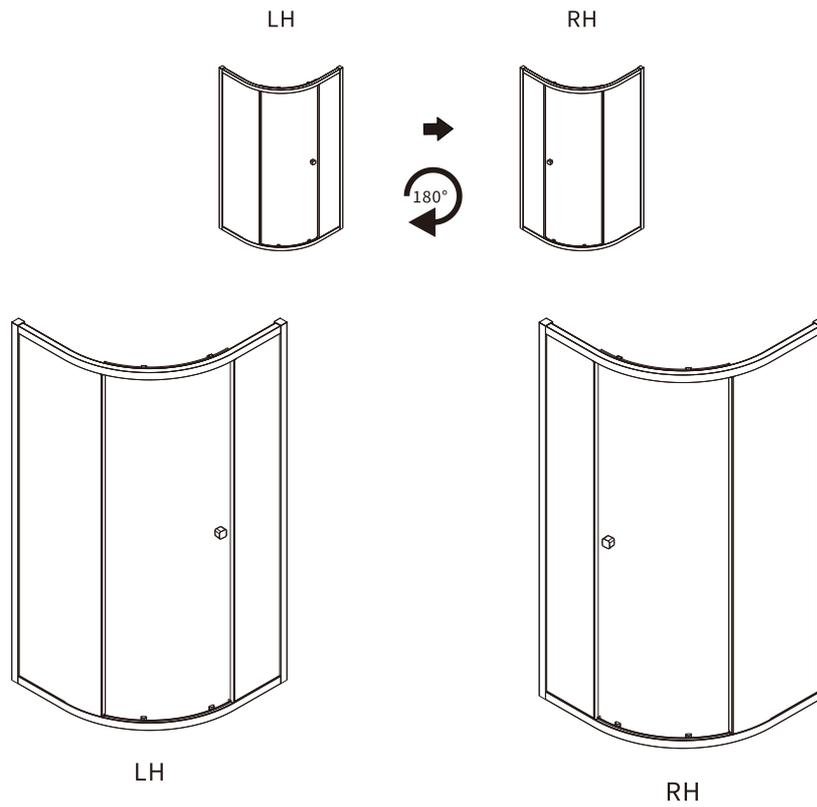

This product is reversible for left or right hand opening.  
Please follow the diagram, and detail below for your choice of installation.

### Tools Required (not supplied):

Spirit Level




Torque Screw Driver



Pencil



Snips



Drill



6mm Drill Bit



Silicone




Measuring Tape






Knife








# COMPONENTS

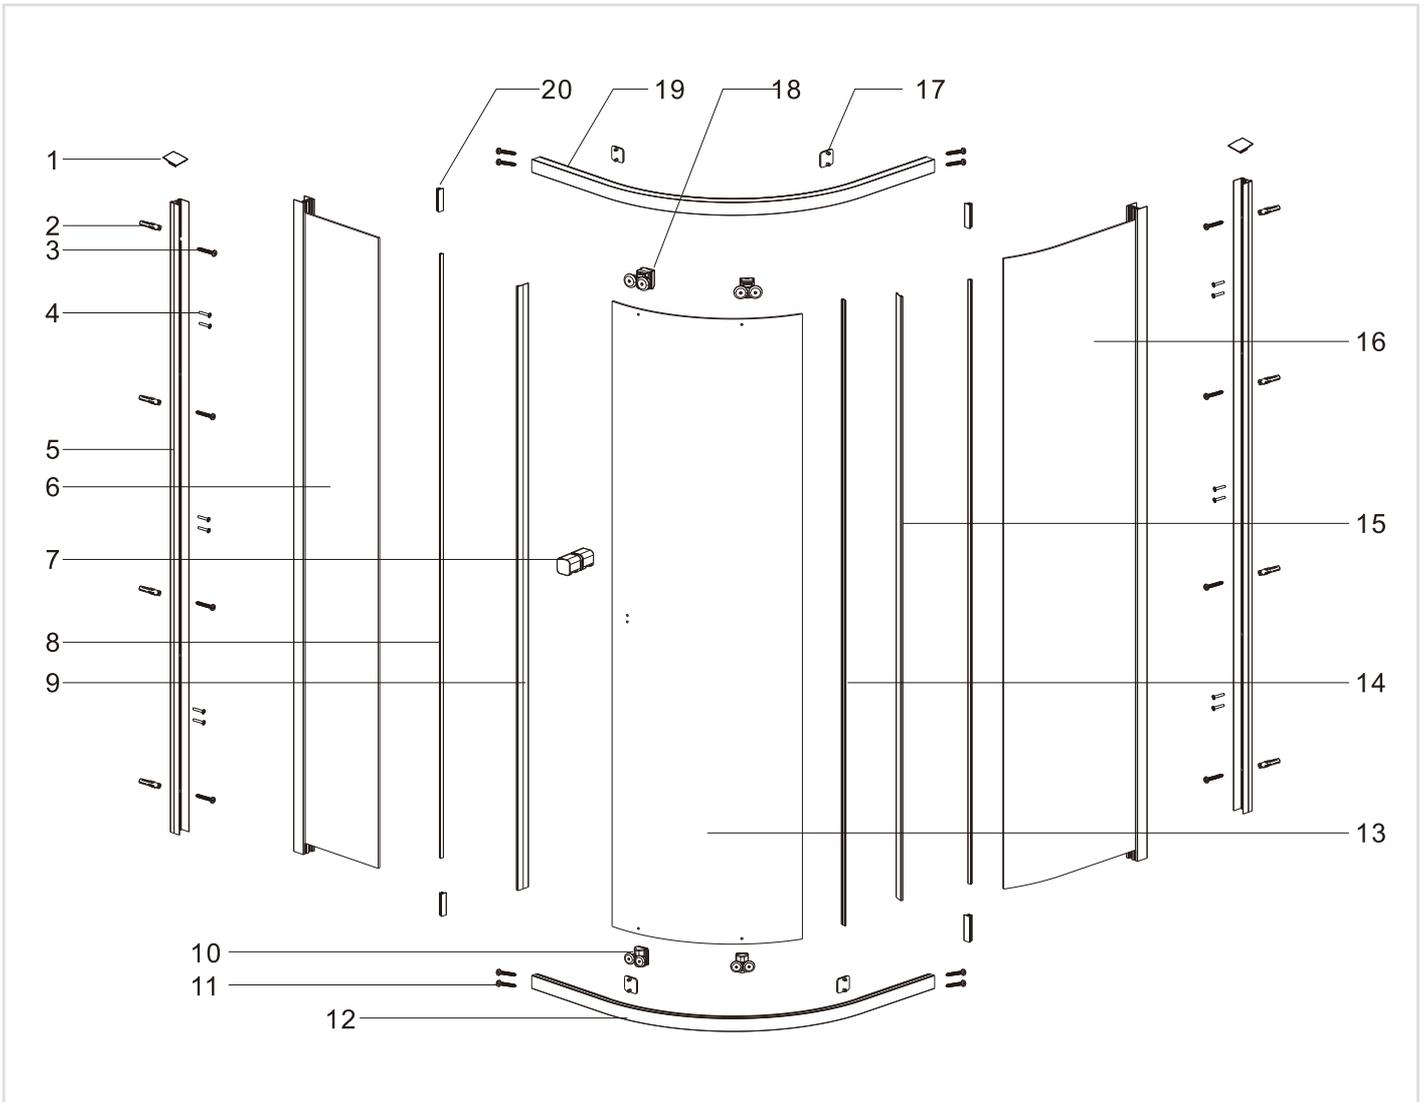

<b>1</b>	Wall Profile Cap		x2	<b>2</b>	Wall Plug		x8	<b>3</b>	Screw ST4*50		x8	<b>4</b>	Screw M5*25		x12
<b>5</b>	Wall Profile		x2	<b>6</b>	Flat Fixed Panel		x1	<b>7</b>	Handle		x1	<b>8</b>	Profile Cover Strip (long)		x2
<b>9</b>	Flat Glass Seal		x1	<b>10</b>	Bottom Roller		x2	<b>11</b>	Screw ST4*30		x8	<b>12</b>	Rail B		x1
<b>13</b>	Curved Moving Panel		x1	<b>14</b>	Curved Moving Panel Seal L=1935mm		x1	<b>15</b>	Fixed Curved Panel Seal L=1883mm		x1	<b>16</b>	Curved Fixed Panel		x1
<b>17</b>	Buffer cap		x4	<b>18</b>	Top Roller		x2	<b>19</b>	Rail A		x1	<b>20</b>	Profile Cover Strip (short)		x4
<b>21</b>	Wrench		x1	<b>22</b>	Allen Key 3mm										










# INSTALLATION

1

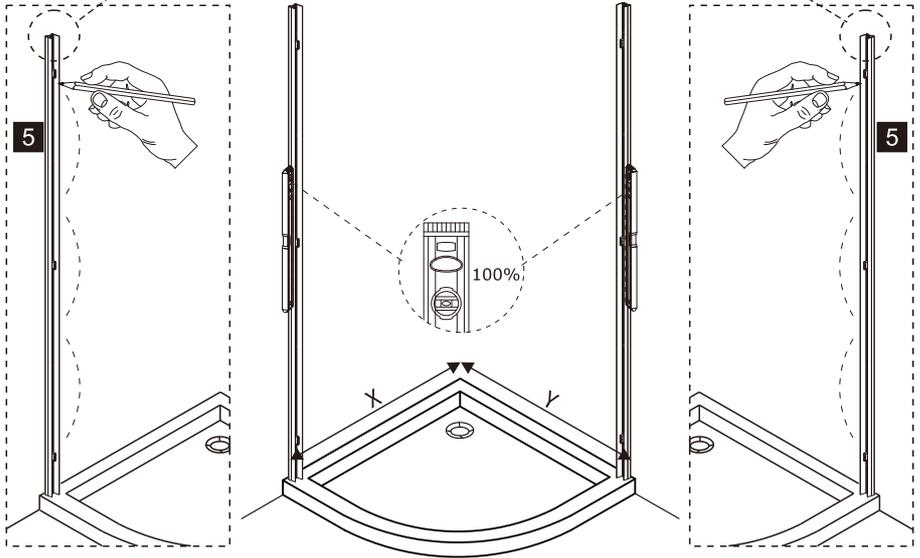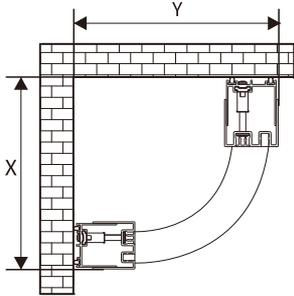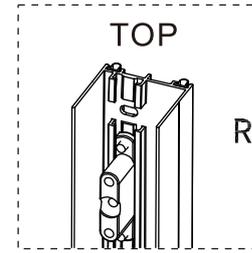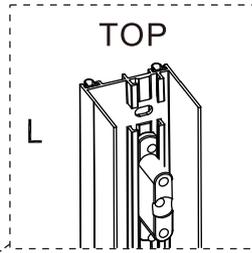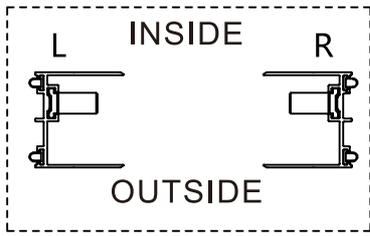

Product	X(mm)	Y(mm)
Quadrant Single Door 800*800	760-775	760-775
Quadrant Single Door 900*900	860-875	860-875
Quadrant Single Door 1000*800	760-775	960-975
Quadrant Single Door 1200*800	760-775	1160-1175
Quadrant Single Door 1200*900	860-875	1160-1175


2

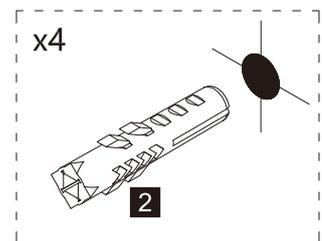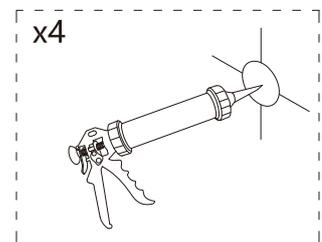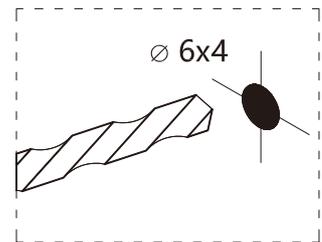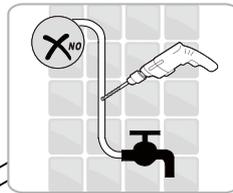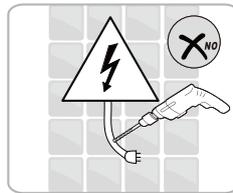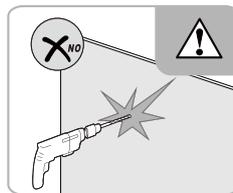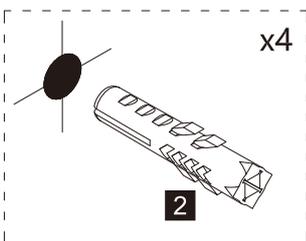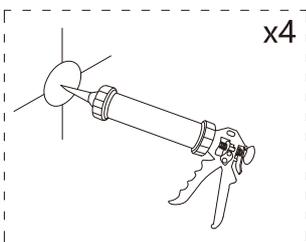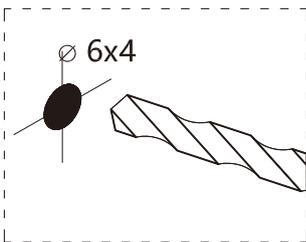


# INSTALLATION

3

Product	X(mm)	Y(mm)
Quadrant Single Door 800*800	760-775	760-775
Quadrant Single Door 900*900	860-875	860-875
Quadrant Single Door 1000*800	760-775	960-975
Quadrant Single Door 1200*800	760-775	1160-1175
Quadrant Single Door 1200*900	860-875	1160-1175

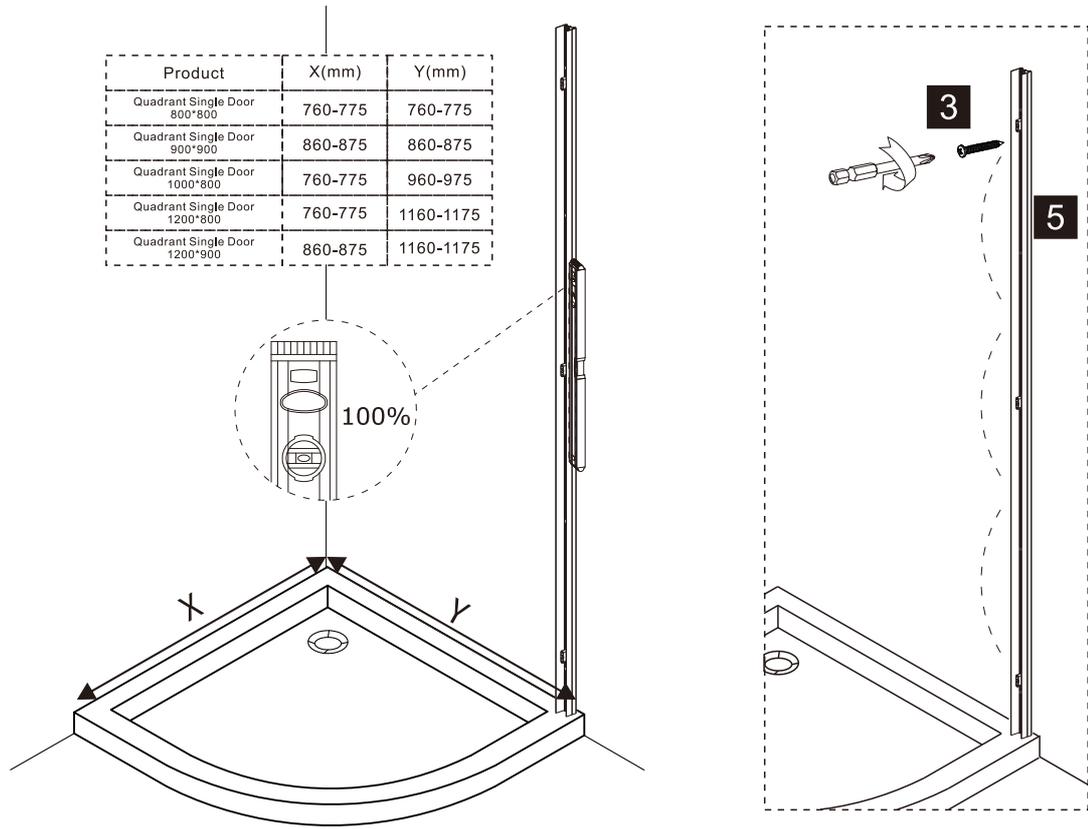


4

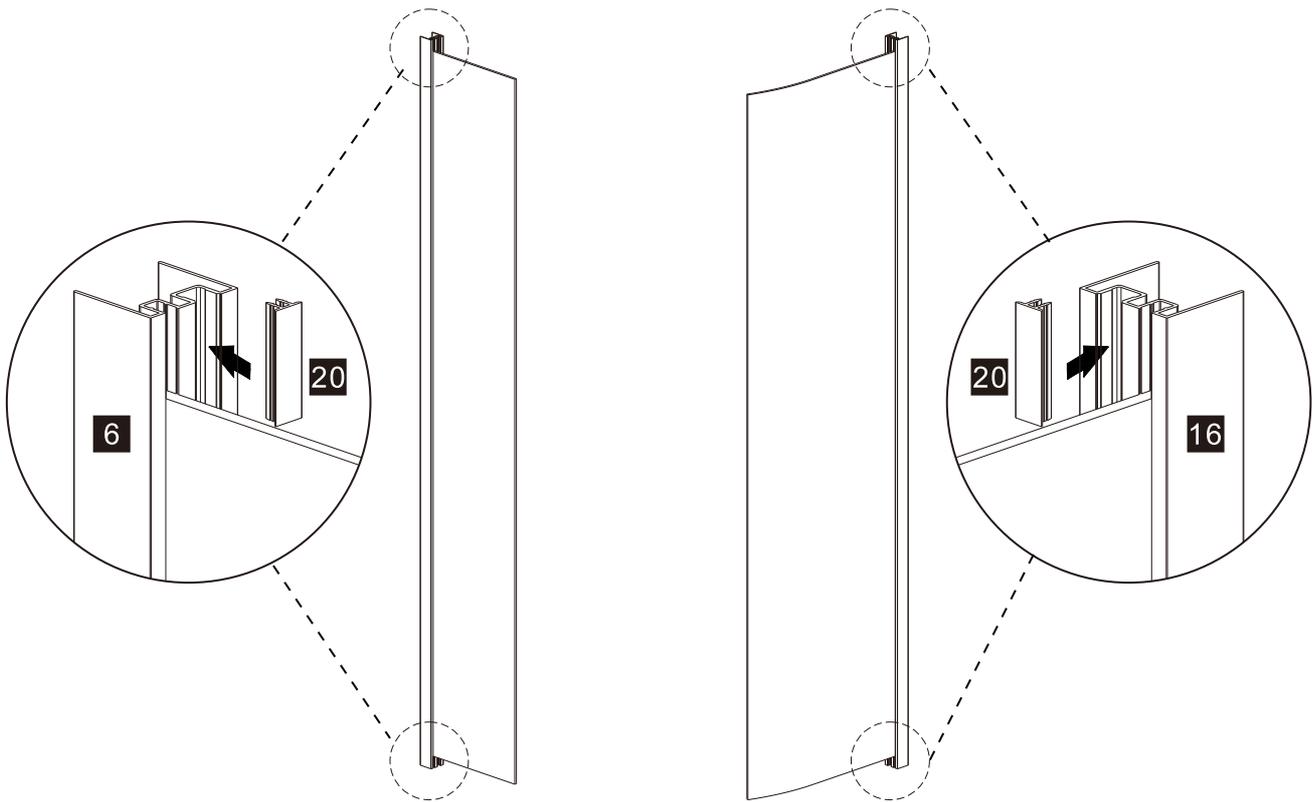


# INSTALLATION

5

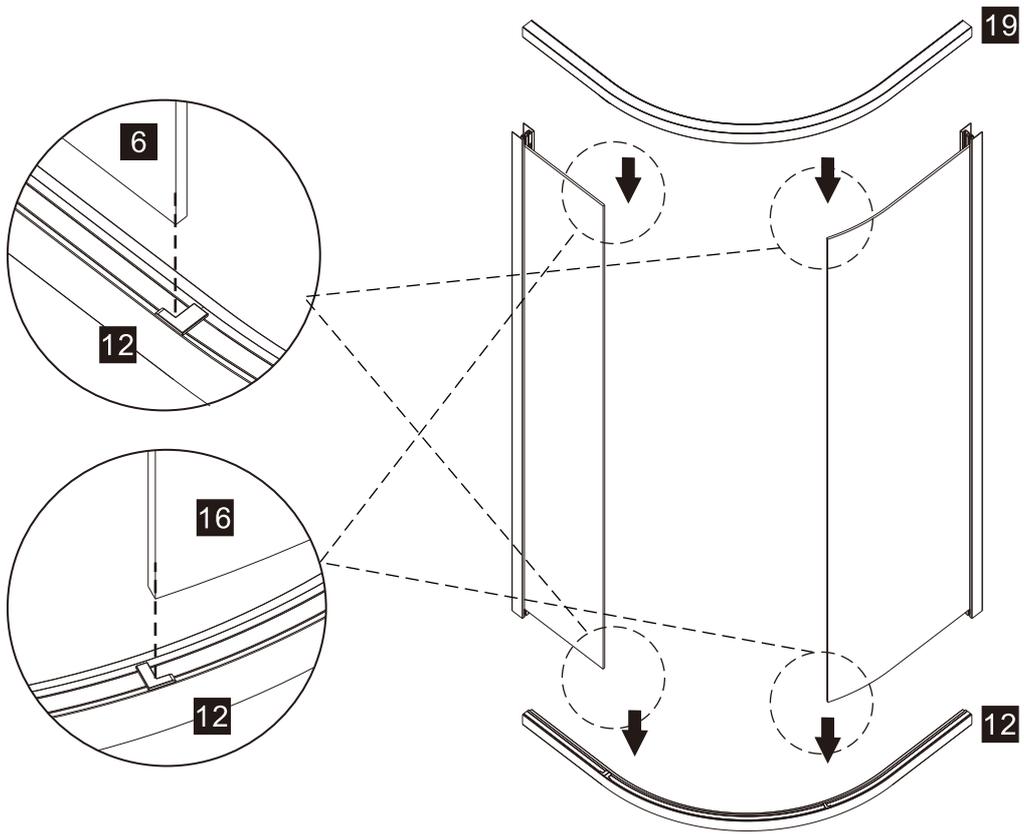


6

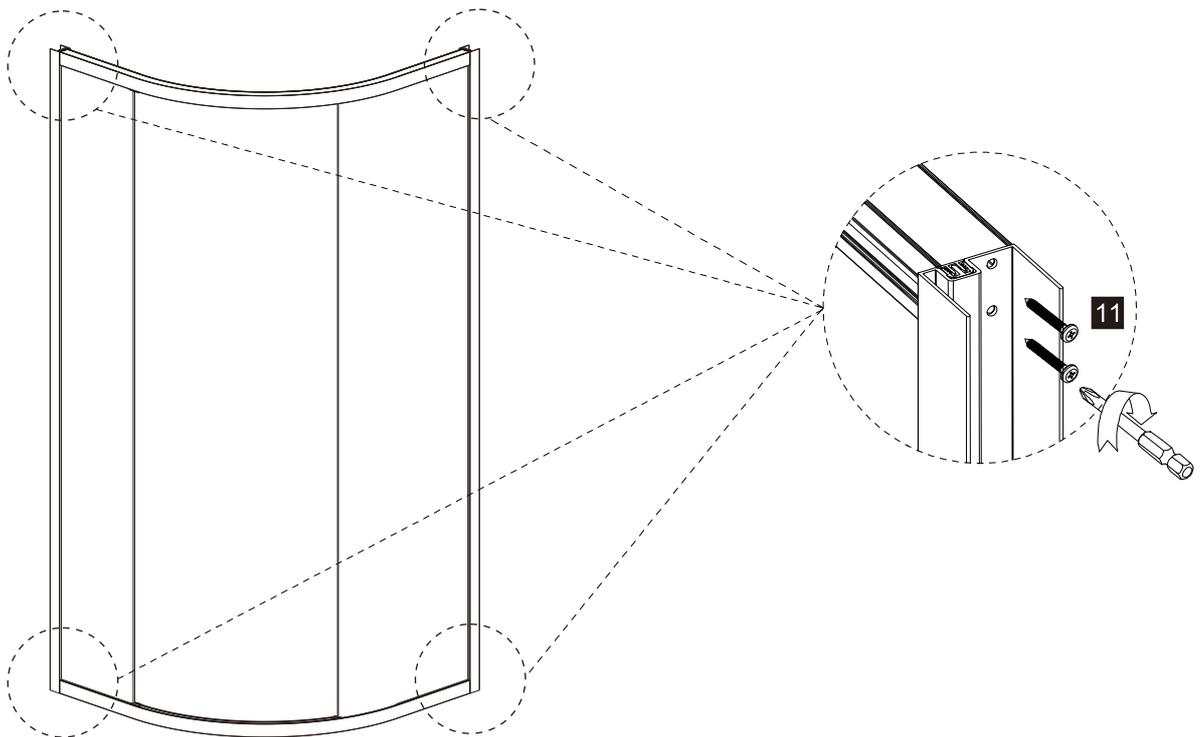


# INSTALLATION

7

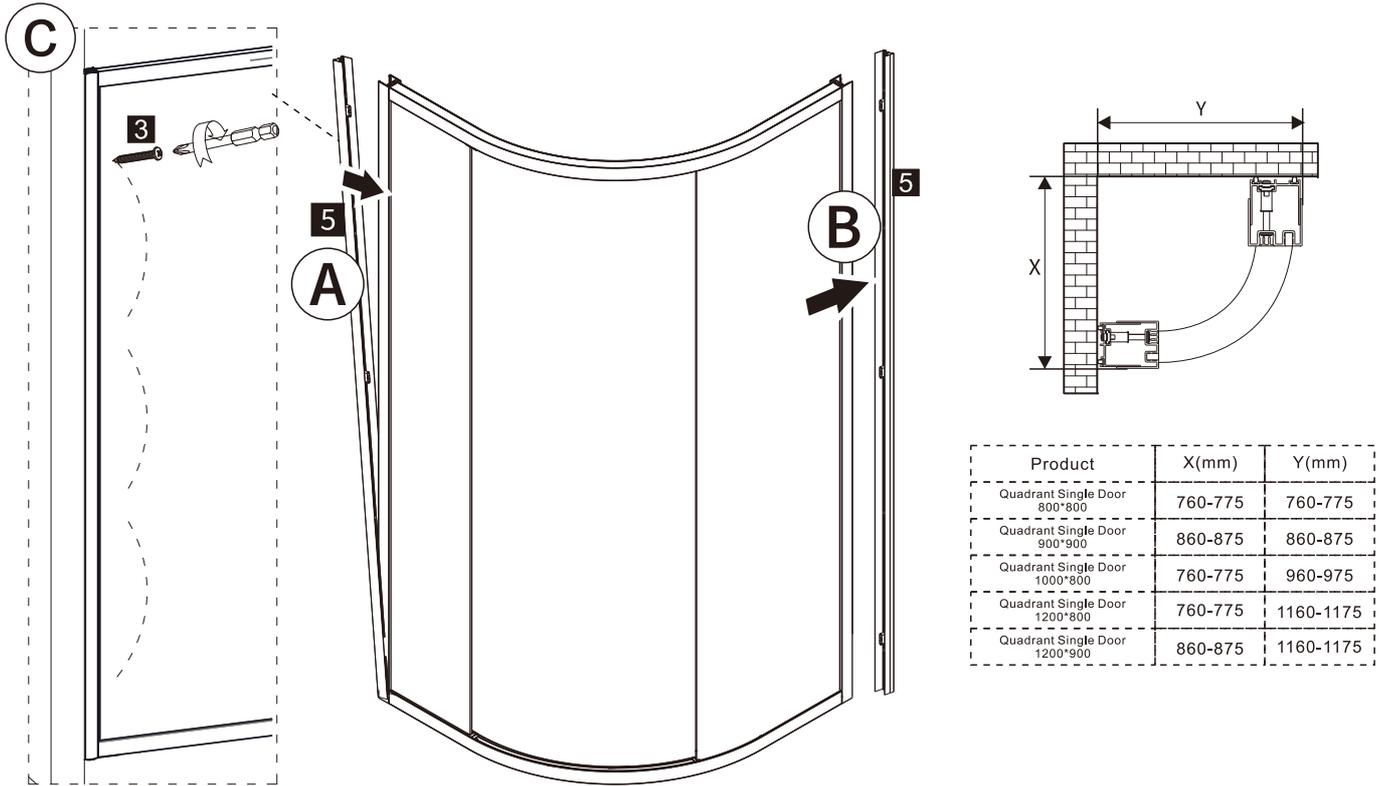


8

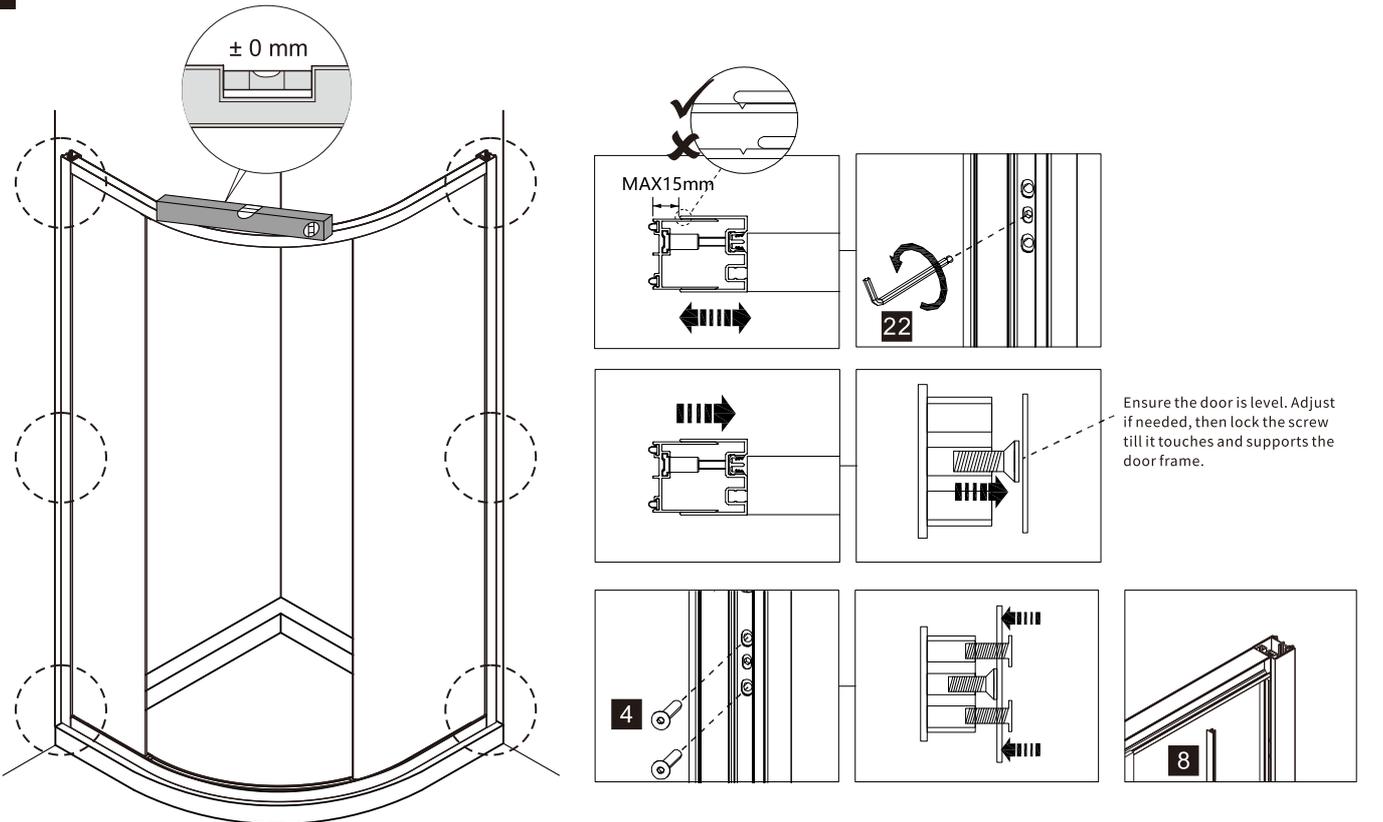


# INSTALLATION

9

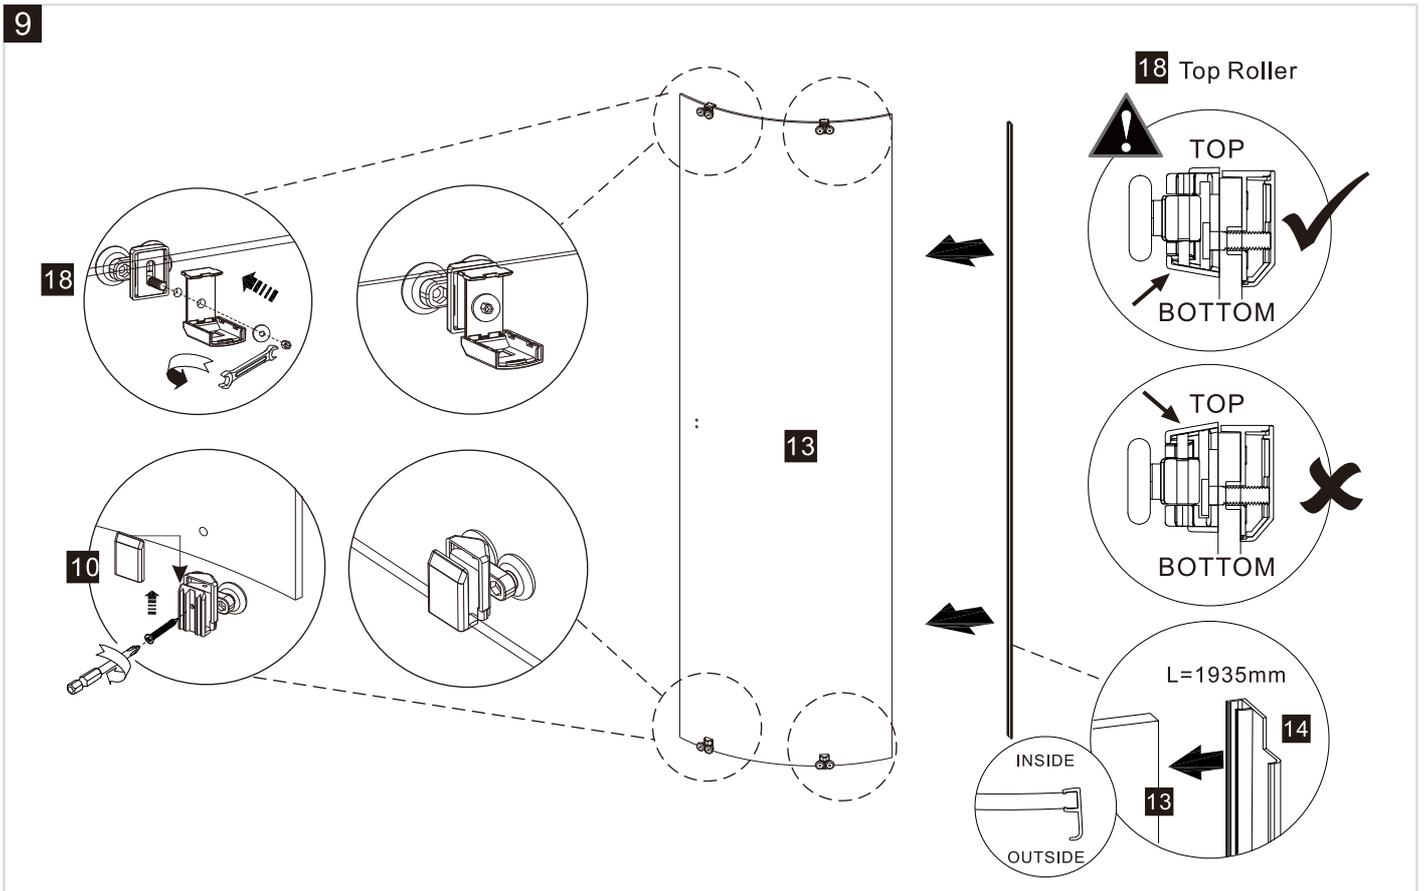


10

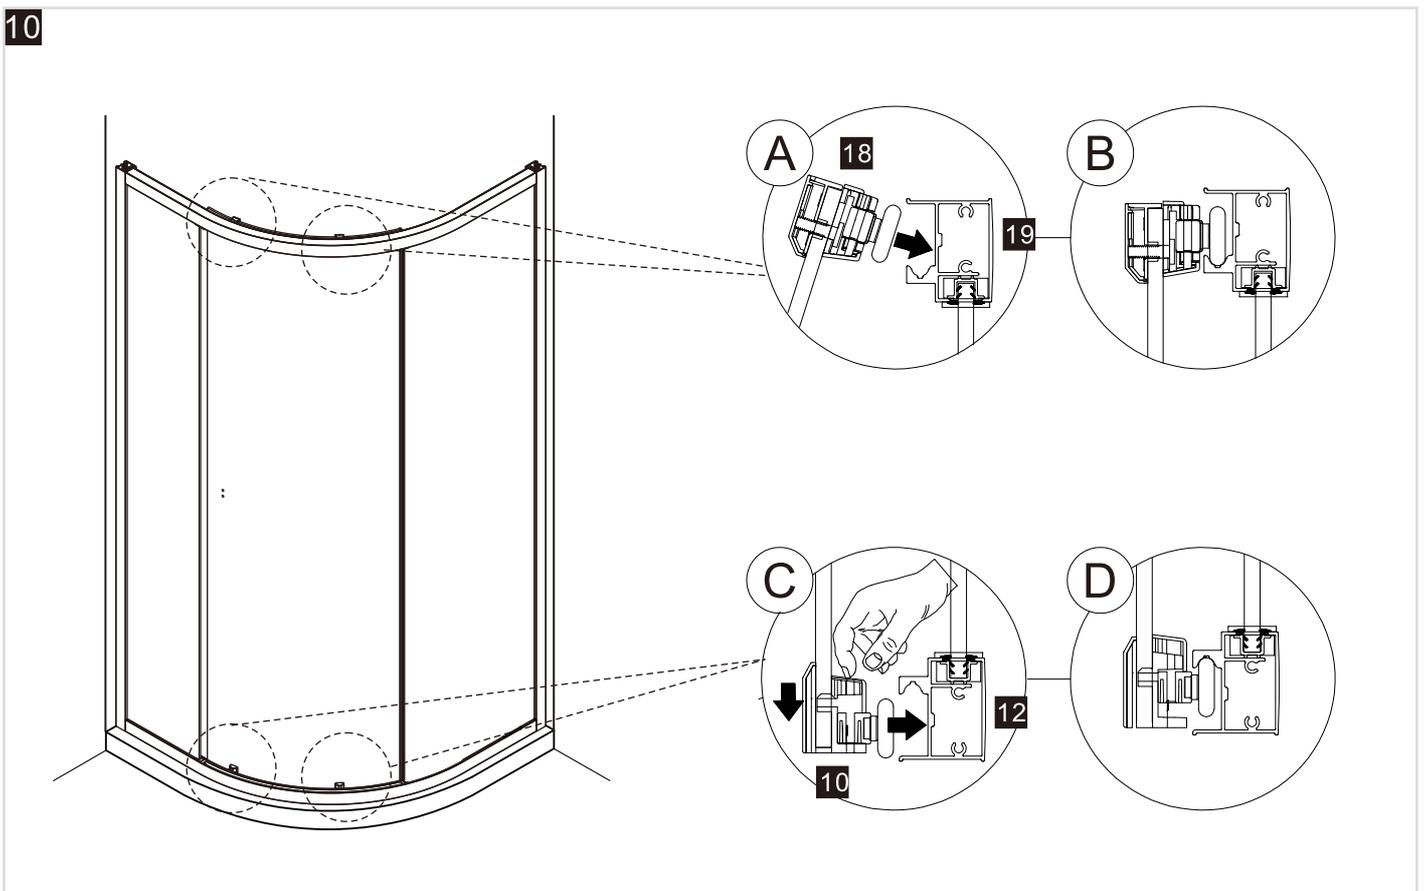


# INSTALLATION

11

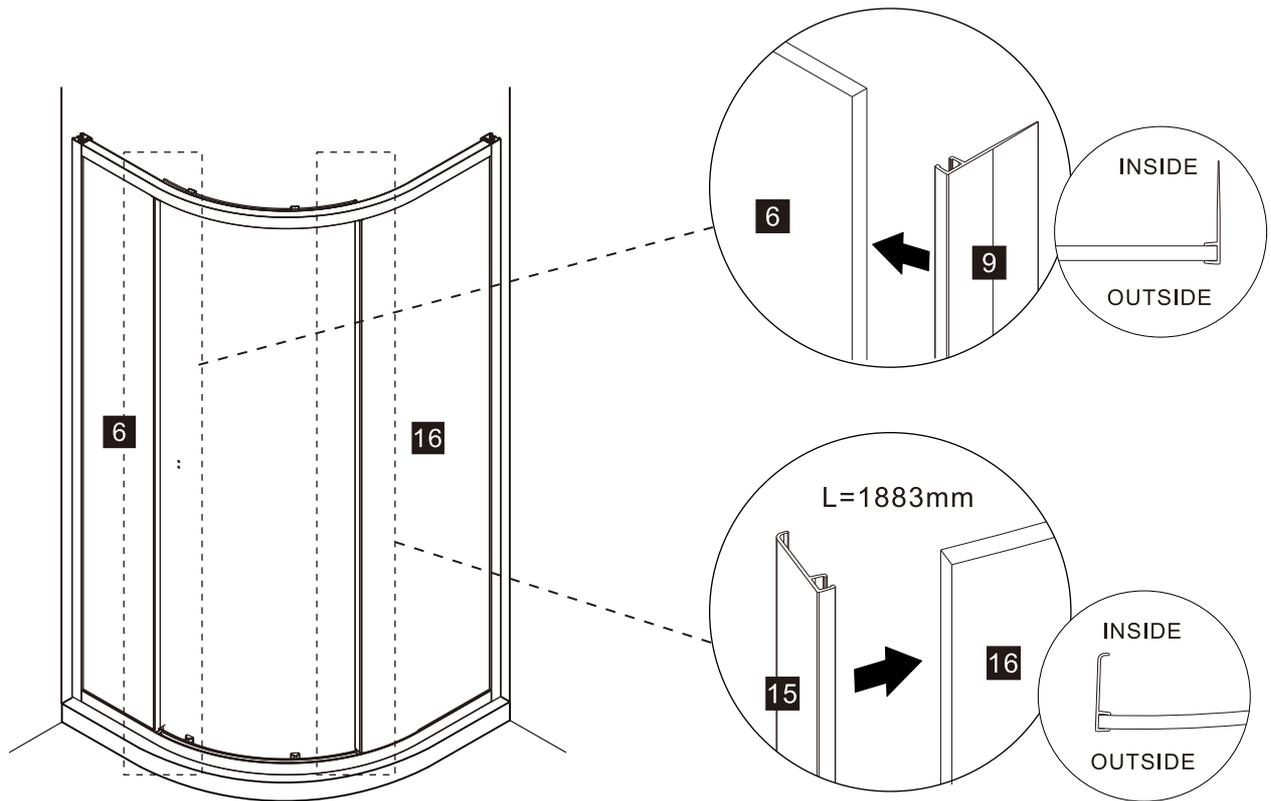


12

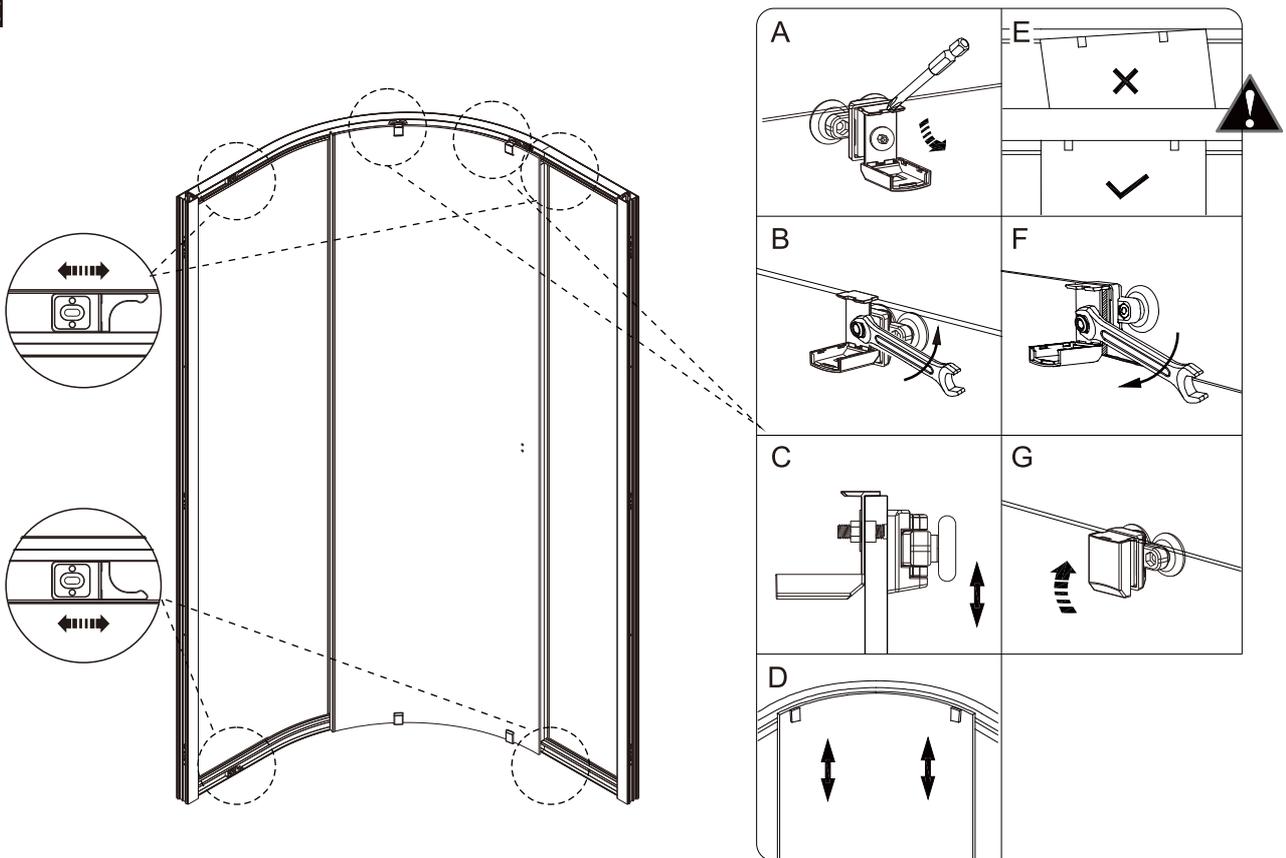

# INSTALLATION

13

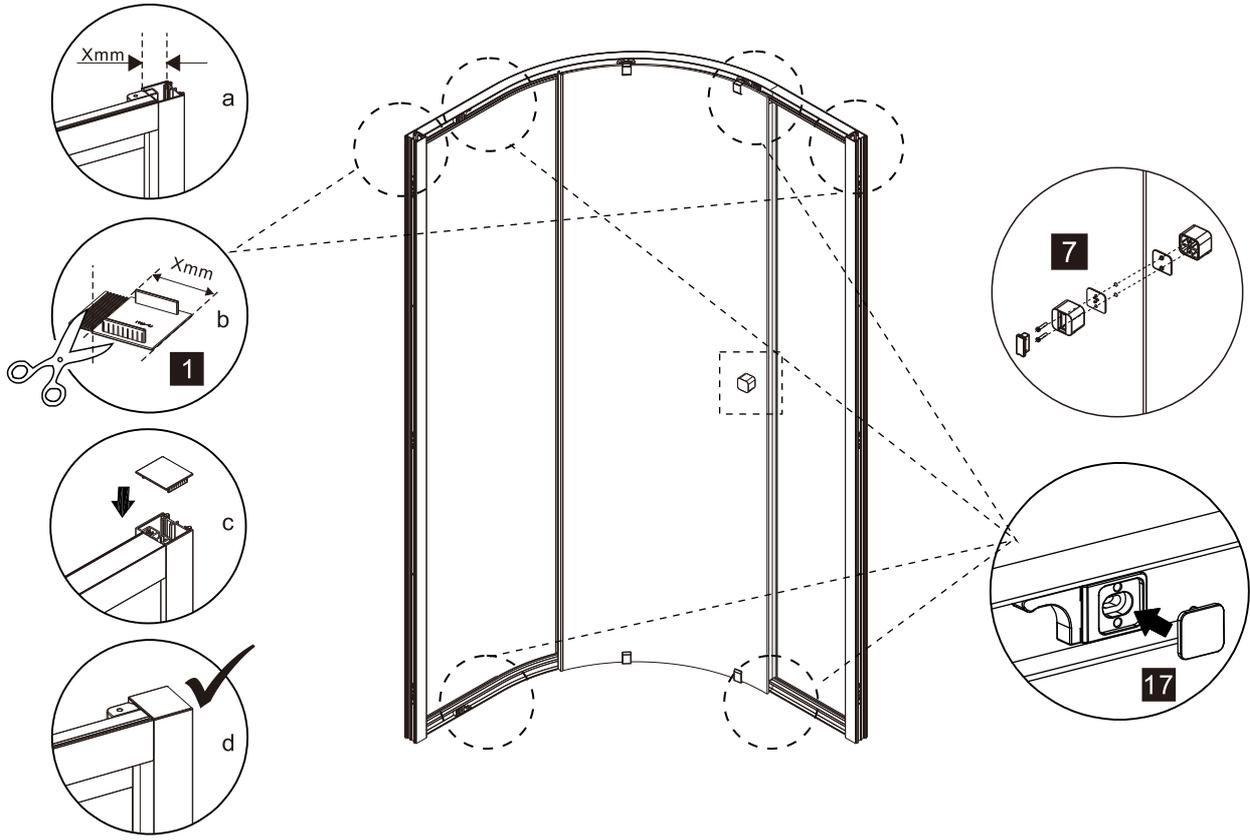

14

